Quick Assembly Connector (No Tool) – 2.0mm/3.0mm/Flat Cable
User's Manual

Rev. 2010D

A. Instruction for SC/PC 2.0 mm / 3.0mm / Flat Cable

You may set Fiber Checker for the best result. If you don't have it, please skip Step 1 & Step 9.

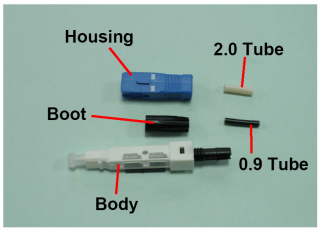	**< Drawing >** Descriptions. Cable Tube 250/900um 0.9 2.0mm 2.0	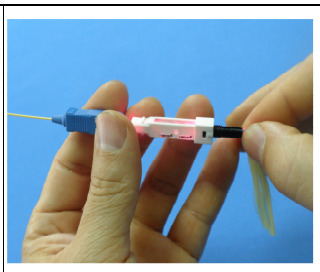	Step 4 Insert the tube and fiber to the body.
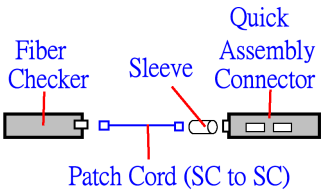	Step 1 Take off dust cap and clean the connector. Then, insert it to Fiber Checker (Patch Cord).* (Skip this if no Fiber Checker.)	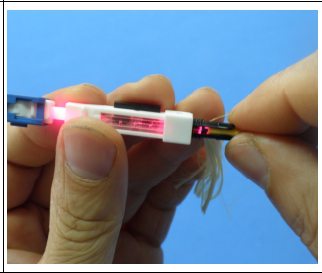	Step 5 Push the fiber to the end and form a very small curve in the jaw. (With Fiber checker, please fine tune fiber until red light is weak.)
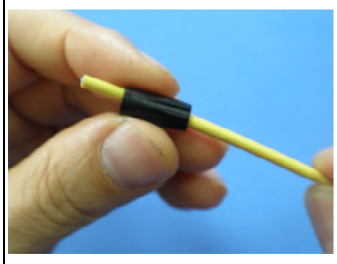	Step 2 Wear boot. Then, wear tube. (No tube for 3.0mm & Flat Cable) Cable Tube 250/900um 0.9 2.0mm 2.0	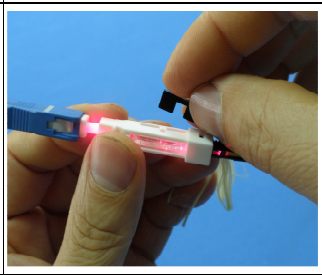	Step 6 Take off "Release Key".
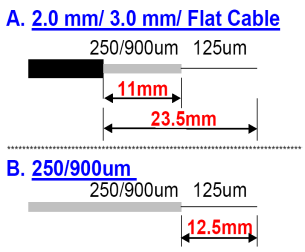	Step 3 After striping fiber, please cleave the fiber as the length.	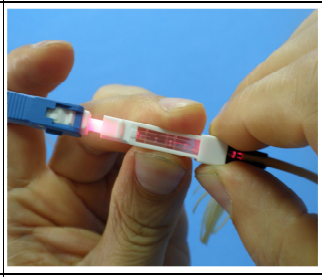	Step 7 Press both buttons on the body during the fiber is curving. *Make sure to push buttons to the end.
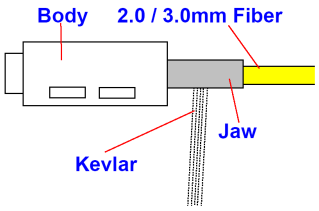	**< Drawing >** Position and direction for Kevlar.	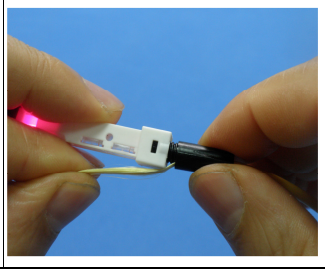	Step 8 Wear the boot to half way. After cutting Kevlar, wear the boot to the end tightly.

*Patch cord on Step 1 is for easy operation and keeps the dust from Fiber checker.

Quick Assembly Connector (No Tool) – 2.0mm/3.0mm/Flat Cable
User's Manual **Rev. 2010D**

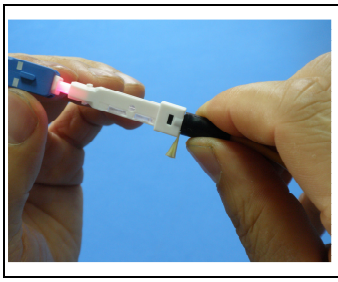	Step 9 Take off from Fiber Checker (Patch Cord) and wear the dust cap. (Skip this if no Fiber Checker.)	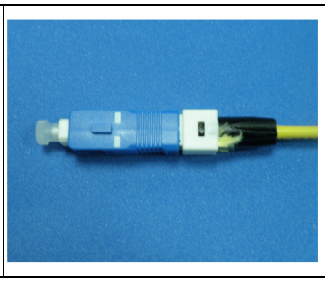	Step 10 Wear the housing. Now the job is done.

B. Release Methods

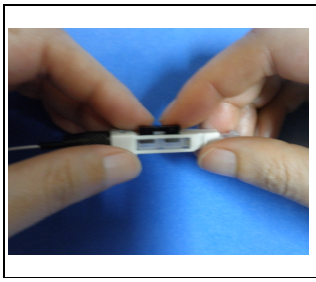	Use Our **Release Key** to push buttons up. (The Key is free to customers.)

C. Contact Information

If you have any question for our products, please contact us.